

Jet Works Controller for 2 Cylinder Engines

**2 Cylinder Version**



- Red Wire -- 12 volt (Red) on Battery
- Black Wire -- Ground (Black) on Battery
- Yellow Wire -- Plug Wire Pick-up
- Gray / Black- Red -- Wrap 3 - 4 times around each plug wire!  
To Solenoid (Polarity does NOT matter)

On @ 1,300 RPM  
 Buzz 1 5/8 5,500 RPM  
 Buzz 2 4/8 5,600 RPM  
 Buzz 3 3/8 5,700 RPM  
 Buzz 4 2/8 5,800 RPM  
 Off @ 5,900 RPM

On @ 1,300 RPM  
 Buzz 1 5/8 5,700 RPM  
 Buzz 2 4/8 5,800 RPM  
 Buzz 3 3/8 5,900 RPM  
 Buzz 4 2/8 6,000 RPM  
 Off @ 6,100 RPM

On @ 1,300 RPM  
 Buzz 1 5/8 5,600 RPM  
 Buzz 2 4/8 5,700 RPM  
 Buzz 3 3/8 5,800 RPM  
 Buzz 4 2/8 5,900 RPM  
 Off @ 6,000 RPM

On @ 1,300 RPM  
 Buzz 1 5/8 5,800 RPM  
 Buzz 2 4/8 5,900 RPM  
 Buzz 3 3/8 6,000 RPM  
 Buzz 4 2/8 6,100 RPM  
 Off @ 6,200 RPM

**Legend**

= Jumper ON

= Jumper OFF

**NOTE:** Keep controller mounted a few inches away from ignition coils or plug wires.  
 Also keep grease on the fuse and the adjusting jumpers at all times to eliminate corrosion!