



# No Limits on Performance!



www.microtouchinc.com




## Micro Touch 16x2-2 Custom Programmable Controller

- Red Wire = 12 volt ( + Red) on Battery
- Black Wire = Ground ( - Black) on Battery
- Yellow Wire = Wrap around spark plug Wire 3 times then tape.  
\*\*\* 99-02 Sea•Doo's with twin coils - wrap around each plug wire 3 times.\*\*\*
- Gray / Red-Blk Wires = To Solenoid (Polarity does NOT matter)

## Speed Selections

RPM Settings	Water ON RED Jumpers			
	1	2	3	4
1,500	■	■	■	■
1,600	••	■	■	■
1,700	■	••	■	■
1,800	••	••	■	■
1,900	■	■	••	■
2,000	••	■	••	■
2,100	■	••	••	■
2,200	••	••	••	■
2,300	■	■	■	••
2,400	••	■	■	••
2,500	■	••	■	••
2,600	••	••	■	••
2,700	■	■	••	••
2,800	••	■	••	••
2,900	■	••	••	••
3,000	••	••	••	••

RPM Settings	Water OFF BLUE Jumpers			
	5	6	7	8
5,000	■	■	■	■
5,150	••	■	■	■
5,300	■	••	■	■
5,450	••	••	■	■
5,600	■	■	••	■
5,750	••	■	••	■
5,900	■	••	••	■
6,050	••	••	••	■
6,200	■	■	■	••
6,350	••	■	■	••
6,500	■	••	■	••
6,650	••	••	■	••
6,800	■	■	••	••
6,950	••	■	••	••
7,100	■	••	••	••
7,250	••	••	••	••

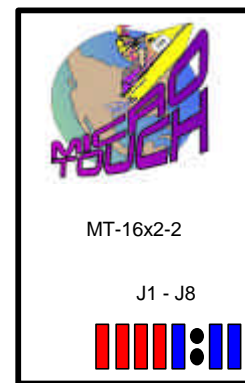

<u>Legend</u>	
■	= Jumper - ON
••	= Jumper - OFF

Water shuts OFF 400 RPM's earlier than OFF Setting

**NOTE:** Keep the controller mounted a few inches away from ignition coil(s) or plug wires. Also keep grease on the fuse and the adjusting jumpers at all times to eliminate corrosion!