

Factory Pipe™ E.C.W.I.™ Controller for 2 Cyl. Polaris 785cc Watercraft

2 Cyl. Version



- Red Wire --** 12 volt (Red) on Battery
- Black Wire --** Ground (Black) on Battery
- Yellow Wire --** Plug Wire Pick-up Wrap 3 - 4 times around each plug wire!
Note: 99-01 Dual Coil Sea•Doo's Wrap around both plug wires!
- White / Black- Red --** To Solenoid (Polarity does NOT matter)

On @ 3,500 RPM
 Buzz 1 5/8 4,950 RPM
 Buzz 2 4/8 5,750 RPM
 Buzz 3 3/8 6,400 RPM
 Buzz 4 2/8 7,095 RPM
 Off @ 7,180 RPM

On @ 4,000 RPM
 Buzz 1 5/8 5,000 RPM
 Buzz 2 4/8 5,650 RPM
 Buzz 3 3/8 6,500 RPM
 Buzz 4 2/8 7,149 RPM
 Off @ 7,200 RPM

On @ 3,500 RPM
 Buzz 1 5/8 4,950 RPM
 Buzz 2 4/8 6,349 RPM
 Buzz 3 3/8 6,350 RPM
 Buzz 4 2/8 7,095 RPM
 Off @ 7,100 RPM

On @ 3,500 RPM
 Buzz 1 5/8 4,750 RPM
 Buzz 2 4/8 5,500 RPM
 Buzz 3 3/8 5,501 RPM
 Buzz 4 2/8 5,502 RPM
 Off @ 5,503 RPM

Legend

= Jumper ON
 = Jumper OFF

NOTE: Keep controller mounted a few inches away from ignition coils or plug wires.
 Also keep grease on the fuse and the adjusting jumpers at all times to eliminate corrosion!
 Sea•Doo is a Registered Trademark of the Bombardier Corp.