

Factory Pipe™ Universal E.C.W.I.™ Controller for 2 Cyl. Watercraft

2 Cyl. Version



- Red Wire --** 12 volt (Red) on Battery
- Black Wire --** Ground (Black) on Battery
- Yellow Wire --** Plug Wire Pick-up Wrap 3 - 4 times around each plug wire!
Note: 99-01 Dual Coil Sea•Doo's Wrap around both plug wires!
- White / Black- Red --** To Solenoid (Polarity does NOT matter)

On @ 3,650 RPM
 Buzz 1 5/8 6,150 RPM
 Buzz 2 4/8 6,300 RPM
 Buzz 3 3/8 6,400 RPM
 Buzz 4 2/8 6,550 RPM
 Off @ 6,780 RPM

On @ 3,000 RPM
 Buzz 1 5/8 5,000 RPM
 Buzz 2 4/8 5,500 RPM
 Buzz 3 3/8 6,000 RPM
 Buzz 4 2/8 6,200 RPM
 Off @ 6,400 RPM

On @ 3,000 RPM
 Buzz 1 5/8 5,500 RPM
 Buzz 2 4/8 6,000 RPM
 Buzz 3 3/8 6,300 RPM
 Buzz 4 2/8 6,500 RPM
 Off @ 6,700 RPM

On @ 3,000 RPM
 Buzz 1 5/8 4,500 RPM
 Buzz 2 4/8 5,000 RPM
 Buzz 3 3/8 5,200 RPM
 Buzz 4 2/8 5,400 RPM
 Off @ 5,600 RPM

Legend

= Jumper ON

= Jumper OFF

**NOTE: Keep controller mounted a few inches away from ignition coils or plug wires.
 Also keep grease on the fuse and the adjusting jumpers at all times to eliminate corrosion!
 Sea•Doo is a Registered Trademark of the Bombardier Corp.**