

Jet Works Controller for 3 Cylinder Engines

3 Cylinder Version



Red Wire -- 12 volt (Red) on Battery
Black Wire -- Ground (Black) on Battery
Yellow Wire -- Plug Wire Pick-up
Gray / Black- Red -- Wrap 3 - 4 times around each plug wire!
 To Solenoid (Polarity does NOT matter)

On @ 1,500 RPM
 Buzz 1 5/8 5,200 RPM
 Buzz 2 4/8 5,300 RPM
 Buzz 3 3/8 5,400 RPM
 Buzz 4 2/8 5,500 RPM
 Off @ 5,600 RPM

On @ 1,500 RPM
 Buzz 1 5/8 5,400 RPM
 Buzz 2 4/8 5,500 RPM
 Buzz 3 3/8 5,600 RPM
 Buzz 4 2/8 5,700 RPM
 Off @ 5,800 RPM

On @ 1,500 RPM
 Buzz 1 5/8 5,300 RPM
 Buzz 2 4/8 5,400 RPM
 Buzz 3 3/8 5,500 RPM
 Buzz 4 2/8 5,600 RPM
 Off @ 5,700 RPM

On @ 1,500 RPM
 Buzz 1 5/8 5,500 RPM
 Buzz 2 4/8 5,600 RPM
 Buzz 3 3/8 5,700 RPM
 Buzz 4 2/8 5,800 RPM
 Off @ 5,900 RPM

Legend

= Jumper ON
 = Jumper OFF

NOTE: Keep controller mounted a few inches away from ignition coils or plug wires.
 Also keep grease on the fuse and the adjusting jumpers at all times to eliminate corrosion!